


User Manual

LogEt 8 Series

Overview

LogEt 8 series data loggers can be widely used in each stage of the storage and cold chain logistics, such as refrigerated containers/ trucks, cooler bags, cooling cabinets, medical cabinets, freezers, and laboratories.

The loggers feature an LCD screen and two buttons design. They support various start and stop modes, multiple threshold settings, two storage modes (stop when full & cyclic record) and PDF report automatically generated for users to check data without using software.

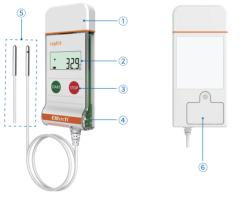

USB Port	4 Internal Sensor
LCD Screen	(5) External Sensor
B) Button	Battery Cover

Accuracy	Sensor	Measurement Range	Туре
±0.3°C/0.5°F	Digital Temperature Sensor	-30°C ~ 70°C -22°F ~ 158°F	Internal Temperature
Temperature: ± # Humidity: ±	rature Sensor	-40°C ~ 85°C -40°F ~ 185°F	External Temperature
Temperature: ±0.3°C (-20°C ~ 40°C); ±0.5°F (-4°F ~ 104°F) ±0.5°C (-50°C ~ 85°C); ±0.9°F (-58°F ~ 185°F) ±1°C (-100°C ~ 150°C); ±1.8°F (-148°F ~ 302°F) ±2°C/3.6°F (others) Humidity: ±3%RH (25°C: 20%RH ~ 80%RH), ±5%RH (others)	Digital Temperature and Humidity Sensor	-30°C ~70°C -40°C ~85°C -22°F ~158°F -40°F ~185°F 0%RH ~100%RH 0%RH ~100%RH	Internal Temperature and Humidity
C); ±0.5°F (-4°F ~ 1 C); ±0.9°F (-58°F ~ :); ±1.8°F (-148°F ~ RH ~ 80%RH), ±5°	nperature lity Sensor	-40°C ~85°C -40°F ~185°F 0%RH ~100%RH	Extemal Temperature and Humidity
104°F) 185°F) 302°F) %RH (others)	Platinum Resistance Temperature Sensor PT100	-85°C ~ 150°C -196°C ~ 150°C -121°F ~ 302°F -320.8°F ~ 302°	External Low Temp
	Resistance Sensor PT100	-196°C ~150°C -320.8°F ~ 302°	External Ultra-low Temp

Specifications

Resolution: Temperature: 0.1°C/0.1°F; Humidity: 0.1%RH

Memory: 16,000 points (MAX)

Logging Interval: 10 seconds ~ 24 hours

Start Mode: Press button or use software

Stop Mode: Press button, use software, or auto stop

Alarm Threshold: Configurable;

Temperature: up to 3 high limits and 2 low limits;

Humidity: 1 high limit and 1 low limit

Alarm Type: Single, cumulative

Alarm Delay: 10 seconds ~ 24 hours

Data Interface: USB port

Report Type: PDF data report

Battery: 3.6V disposable lithium battery 14250H (replaceable)

2 years for storage and use at 10 minutes **Battery Life:**

logging interval and below 25°C

Protection Level: IP65

External probe length: 1.5m

Dimensions: 100 x 46 x 19 mm (LxWxH)

Operation

1. Install Software

Please download and install the free ElitechLog software (macOS and Windows) from www.elitechlog.com/softwares.

2. Configure Parameters

First connect the data logger to the computer USB port, wait until the U icon shows on the LCD, then configure via:

ElitechLog software:

- If you do not need to change the default parameters (in Appendix);
 please click Quick Reset under Summary menu to synchronize local time before usage;
- If you need to change the parameters, please click the **Parameter** menu, enter your preferred values, and click the **Save Parameter** button to complete the configuration.

Warnina! For first time user or after battery replacement:

To avoid time or time zone errors, please make sure you click **Quick Reset** or **Save Parameter** before usage to sync and configure your local time into the logger.

3. Start Logging

Press Button:

Press and hold the left button for 5 seconds until the ▶ icon shows on the LCD, indicating the logger starts logging.

Auto Start:

Immediate Start: The logger starts logging after plugged out from

Timed Start: The logger starts counting after removed from the computer, and will start logging automatically after the set date/time.

Note: If the ▶ icon keeps floshing, it means the logger configured with start delay; it will start logging after the set delay time elapses.

4. Mark Events

Press and hold the left button for 5 seconds to mark current temperature and time, up to 10 groups. After events marked, the LCD will display **4 and currently marked groups.



Elitech Technology, INC. www.elitechlog.com 1551 McCarthy Blvd, Suite 112 Miloitas. CA 95035 USA

5. Stop Logg

Press Button*: Press and hold the right button for 5 seconds until the ■ icon shows on the LCD, indicating the logger stops logging.

Auto Stop**: When the recorded points reach the maximum memory, the logger will stop automatically.

Use Software: Open ElitechLog software, click Summary menu, and Stop Logging button.

Note: *Stop via **Press Button** is the default. If set as disabled, this function will be invalid, please open ElitechLog software and click **Stop Logging** button to stop it.

The **Auto Stop function will be disabled automatically if you enabled the **Circular Logging**.

6. Download Da

Connect the data logger to your computer USB port, wait until the U icon shows on the LCD, then download data:

Without ElitechLog Software: Simply find and open the removable storage device **ElitechLog**, save the auto generated PDF report to your computer for viewing.

With ElitechLog software: After the logger auto-upload its data to the ElitechLog software, click **Export** and select your preferred file format to export. If data failed to auto-upload, please manually click **Download** and then repeat above operation.

7. Re-use the Logge

To reuse a logger, please stopped it first. Then connect it to your computer and use ElitechLog software to save or export the data. Next, reconfigure the logger by repeating the operations in 2. Configure Parameters*. After finished, follow 3. Start Logging to restart the logger for new logging.

Warning! * To make space for new loggings, all previous logging data inside the logger will be deleted after re-configuration.

If you forgot to save/export data, please try to locate the logger in the History menu of ElitechLoq software.

8. Repeat Start:

To restart the stopped logger, you may press and hold the left button to start logging quickly without reconfiguration.


Note: Please backup data before restart by repeating 6. Download
Data . Without ElitechLog Software.

Status Indication

1. Buttons

Operations	Function
Press and hold the left button for 5s	Start logging
Press and hold the right button for 5s	Stop logging
Press and release the left button	Check/Switch interface
Press and release the right button	Back to main menu
Press and hold the left button for 5s	Mark events (under logging status)

2. LCD Screen

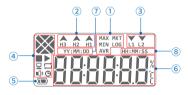

① Function	⑤ Battery Level
② High limit alarm	Temperature/Humidity Value
③ Low limit alarm	⑦ Date
④ Working status	® Time

3. LCD Interface

Meaning	Display
1. Timed start	: 2 8
Delay start	: 2 8
2. Not start	28
3. Started	30 8
4. Recorded points	16000
5. Maximum temperature	58 8
6. Minimum temperature	
7. MKT value	 B C
8. Average temperature	
9. High temperature limit 3	60 0
10. High temperature limit 2	50 0
11. High temperature limit 1	40 0
12. Low temperature limit 1	. III
13. Low temperature limit 2	2 0
14. High humidity limit	* 880*

Battery Replacement

1. Remove the screws, open the battery cover and take out the old battery.



2. Install a new battery with negative(-) towards the spring.



3. Mount the battery cover and tighten the screw.



What's Included

- ◆ Temperature (Humidity) Data Logger x 1
- ♦ User Manual x 1
- ◆ Certificate of Calibration x 1

⚠ Warning!

- a Please store your logger at room temperature.
- If you use the logger for the first time, please use ElitechLog software to synchronize system time and configure parameters.
- **3** Do not remove the battery if the logger is logging.
- a The LCD screen will be auto off after 15 seconds of inactivity (by default). Press the button again to turn on the screen.
- Any parameter configuration on ElitechLog software will delete all logged data inside the logger. Please save data before you apply any new configurations.
- ② Do not use the logger for long-distance transport if the battery is not full.

Default Parameter Configurations

Parameter

1 didilictei	Delaute
Logging Interval	10 min
Start Mode	Press Button
Start Delay	/
Stop Mode - Press Button	Enable
Temporary PDF	Enable
Temperature unit	°C
Time Zone	UTC+0:00
Repeat Start	Disable
Circular Logging	Disable
Alarm Mode	Multiple Alarms
Alarm Type	Single
Alarm delay	/
High Temperature Limit H3	/
High Temperature Limit H2	/
High Temperature Limit H1	8℃
Low Temperature Limit L1	2°C
Low Temperature Limit L2	/
Calibration Temperature	0℃
High Humidity Limit	/
Low Humidity Limit	/
Calibration Humidity	/

Default

6 7 8 9

Meaning

15. Low humidity limit

16. Maximum humidity

17. Minimum humidity

18. Average humidity

19. Current date & time

21. PDF generation progress

20. Sensor error

22. No alarm

23. Alarmed

24. Marked

25. Data deleted

26. USB communicating

Display

~53B

. 105028

__Err

.PdF 88

_USb