


### Product Overview

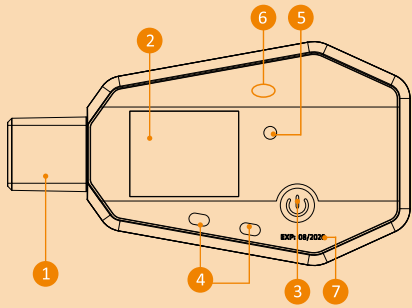


1. USB Protective Cover
2. LCD Screen
3. Button <sup>(1)</sup>
4. LED Indicator
5. Light Sensor
6. Humidity Sensor
7. Shelf Life

<sup>(1)</sup>Button Function Instructions:

Operation	Function	Status Indication <sup>*</sup>
Press & Hold 5 Seconds	Start/Stop Recording	Start Recording: [Rec.] ■■■■■■ Stop Recording: [Stop] ■■■■■■
Single Click	Light Up LCD Backlight; Page Up/Down	See "Indication Instructions"
Double Click	Mark Events	Mark Success: [Mark] ■■■■■■ Mark Failure: [Mark] ■■■■■■

<sup>\*</sup>The code like [Rec.] will show on logger's LCD screen to indicate status. The red square ■ indicates the red LED light is flashing; The green square ■ indicates the green LED light is flashing; Each individual square indicates how many times it will blink; Two adjoining squares like ■■ indicate both red and green light blink simultaneously. The same rules are applied below.

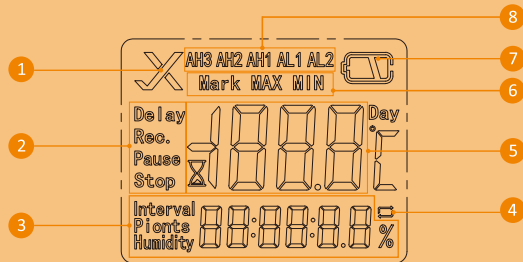

1. Alarm Status <sup>(2)</sup>
2. Working Status
3. Logging Intervals/Recorded Points/Humidity
4. Loop Mark
5. Temperature Display
6. Function Indication
7. Battery Indicator
8. Alarm Threshold <sup>(3)</sup>

<sup>(2)</sup> Only displayed when Alarm is enabled.  
<sup>(3)</sup> Indicates current alarm status, e.g. if temperature goes above AH1 setting, AH1 code will appear on LCD screen.

### Technical Specifications

<b>Recording Options</b>	Single Use	<b>Certifications</b>	EN12830, CE, RoHS
<b>Measurement Range</b>	-30°C ~ 70°C, 0%RH ~ 100%RH	<b>Validation Certificate</b>	Hardcopy
<b>Temperature Accuracy</b>	±0.3°C (-30°C ~ +70°C) ±0.5°C (-20°C ~ +40°C), others ±1.0°C - for LogEt 1 only	<b>Reprogrammable</b>	Via Elitech software Online Configuration Web
<b>Humidity Accuracy</b>	±3%RH (20%RH ~ 80%RH), others ±5%RH - for LogEt 1TH only under 25°C	<b>Software</b>	ElitechLog Data Management Software Win(V4.0.0 or higher) /ElitechLog Mac (V1.0.0 or higher)
<b>Resolution</b>	0.1°C, 0.1%RH	<b>Compatible OS</b>	Mac OS 10.10 or higher Windows XP/7/10
<b>Data Storage Capacity</b>	Max. 16,000 points	<b>Report Generation</b>	Automatic PDF report
<b>Shelf Life / Battery</b>	2 years/CR2450 button cell <sup>(4)</sup>	<b>Password Protection</b>	Software Password Protection
<b>Recording Interval</b>	12 minutes (Default, others on request)	<b>Connection Interface</b>	USB 2.0 (Standard Type A Connector)
<b>Recording Duration</b>	Up to 120 days (Default, others on request) <sup>(5)</sup>	<b>Alarm Configuration</b>	Optional, up to 5 thresholds
<b>Start Mode</b>	Button or software		
<b>Stop Mode</b>	Button, software or stop when full		
<b>Protection Class</b>	IP67 (Not for LogEt 1TH)		

<sup>(4)</sup> Depending on optimal storage conditions (15°C to 23°C / 45% to 75% RH)

<sup>(5)</sup> Depending on application temperature (very low/high temperatures may shorten it)

### Configuration


#### 01 Software Configuration

If you want to use **ElitechLog** software to configure LogEt logger, please download from [www.elitechlog.com/softwares](http://www.elitechlog.com/softwares), then install and open the software. Connect the logger to USB port of computer, wait until "U" shows on LCD screen of the logger. Software will connect and sync the logger automatically, then user could start configuring.



### Operations

#### 01 Start Mode




**Manual start:** Press and hold button for 5 seconds to start recording. If you set Start Delay, logger will start recording after delay time elapses.

**Auto start:** Logger will start recording automatically or on specific date/time configured by user. 2 options are available:

- If you set **Immediate Start**, logger will start recording immediately after remove it from the computer.
- If you set **Timing Start**, logger will start recording automatically on the scheduled date and time.

If logger starts normally, green LED light will blink once every 10 seconds; If alarm is triggered, green LED light will STOP and red LED light will blink once every 10 seconds.

#### 03 Stop Recording




**Manual stop:** Press and hold button for 5 seconds to stop recording.


**Auto stop:** If you set "Stop by button" to "off", the logger will stop automatically when it reaches the maximum storage points.

#### 02 Online Configuration

If you want fast configuration, please connect logger to USB port of computer. Then go to [www.elitechlog.com/config](http://www.elitechlog.com/config), choose the correct logger model and enter configuration parameters. Download the configuration file(.ncfg format) and drag it into logger's removable storage disk "**ElitechLog**" to finish configuration. If parameters are configured successfully, the LCD screen will show "SUC". If it shows "FAL", please pull out the logger and retry the process. System time may not be synchronized via online configuration site.



#### 02 Mark Events



During recording, if you want to mark an events, please double click the button to mark current temperature and time. A maximum of 10 marks are available to be added. If you add a mark successfully, LCD screen will display "Mark", "current mark numbers" and "SUC".

#### 04 Download Data

**ElitechLog Software:** Open **ElitechLog** Software, connect logger to computer, wait until LCD screen shows "U" to indicate USB connection has been established successfully between the logger and computer.


All data should be automatically loaded to **ElitechLog** Software for users to view and analyze. If auto load fails, please click "Read Data" on **ElitechLog** to manually establish connections.

**Without Software:** LogEt logger has automatic PDF report generation function. If you cannot use software, please connect the logger to computer, wait until LCD screen displays "U". A removable storage disk named **ElitechLog** will be generated. There will be PDF report inside the disk, please copy it to your computer and view it.

### Indication Instructions

#### 1. Other LCD Page Indications:


A single click on the button allows browsing each LCD page.

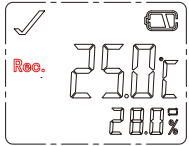


1. Current Temperature & Humidity




2. Recorded Points

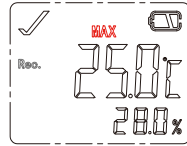


3. Maximum Temperature & Humidity

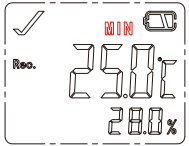

4. Minimum Temperature & Humidity

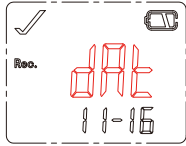

5. System Date: Month-Day

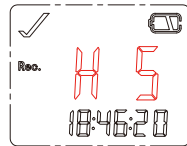

6. System Time: Hour:Minute

#### 2. Meaning of LED blinks

Single click the button, LED light will blink and you may check logger status based on it.

LCD displays...	LED blinks as...	Indicates status...
		Not Started
		Delayed Start/Timing Start
		Started - OK
		Started - Alarm
		Stopped - OK
		Stopped - Alarm

### Important!

- Please read this User Manual carefully before you use data logger.
- Please store the data logger under room temperature.
- The logger can NOT be re-configured once you start it.
- The humidity related parameter and description in the Manual is only for model LogEt 1TH.
- If battery indicator icon on LCD screen only display half of the icon, please do not use the logger for long-distance transport.
- You do NOT need to stop logger for data viewing. Just connect logger to computer and open the temporarily generated PDF report in "ElitechLog" disk to view the data.
- The LCD screen will turn off automatically after 15 seconds of inactivity. Just a single click on the button can light up the screen.
- LogEt 1 series should avoid contact with unstable chemical solvents or other organic compounds especially should avoid long-term storage or exposure to environment that contains high concentrations of ketene, acetone, ethanol, isopropanol, toluene and etc.
- The data logger is ideal to monitor and record temperature (humidity) during storage and transportations for pharmaceuticals and other products. It can be used widely in all parts of warehousing, logistics and cold chain.



**Elitech**

*Elite of technology*

Attach LogEt 1/LogEt 1TH/LogEt 1Bio  
**HERE**

**CAUTION**

TEMPERATURE MONITORING

SHIPPER \_\_\_\_\_

CONTAINER NO. \_\_\_\_\_

TRUCK NO. \_\_\_\_\_

B/L NO. \_\_\_\_\_

REF NO. \_\_\_\_\_

CONTENTS \_\_\_\_\_

LOGGER SERIAL NO. \_\_\_\_\_

START DATE \_\_\_\_\_ DEPARTURE PORT \_\_\_\_\_

START TIME \_\_\_\_\_ ARRIVAL PORT \_\_\_\_\_

TEMPERATURE REQUIRED \_\_\_\_\_

°C  °F